



ALAREVO18VACUUM Inverter for Vacuum

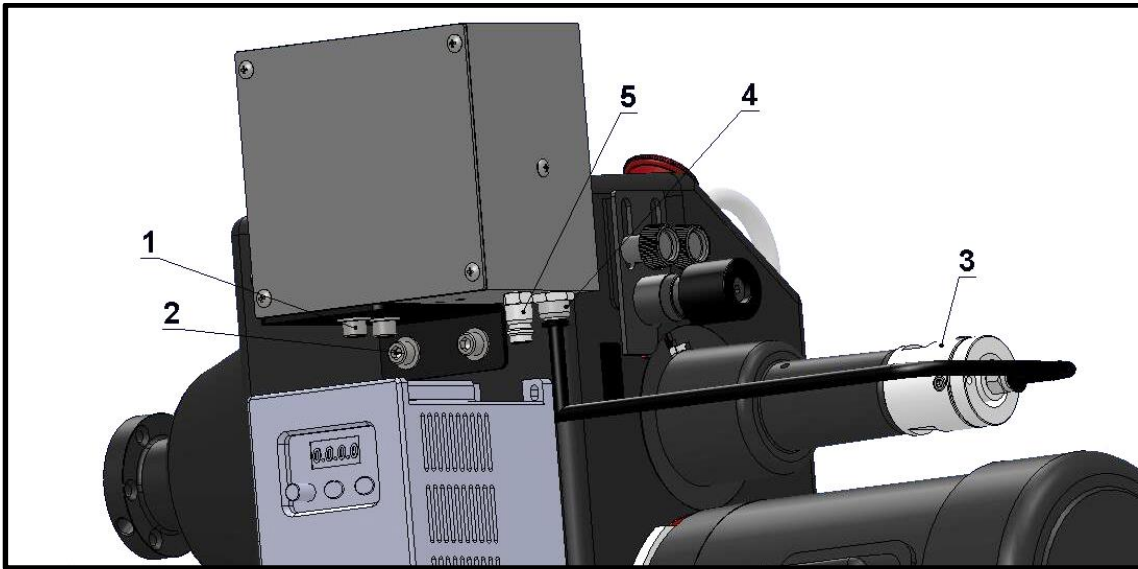

1. Attach the inverter to the bracket by two screws and two washers supplied. Tighten the screws up.
2. Attach the bracket with the inverter together to the headstock by two screws and two washers supplied. Tighten the screws up.
3. Thread the adapter into the main spindle and tighten up by a wrench.
4. Insert the hose all the way into the quick fitting inlet.
5. Connect your incoming air supply to the quick connect coupler. 90 PSI (2-3 CFM) air supply required, 1/4"NPT air supply coupler

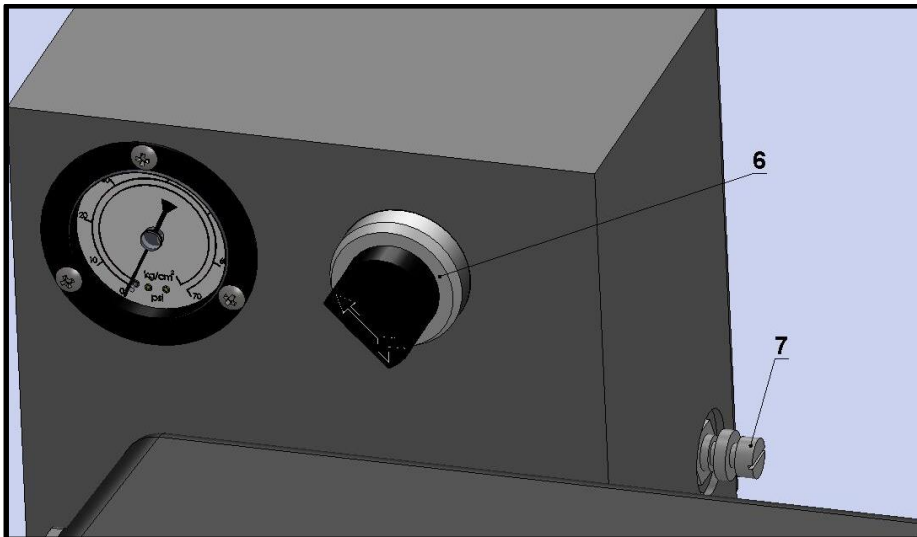

6. Vacuum on/off switch with gauge
7. Flow speed regulator