

C|Flux Series

PROGRAMMING THE REMOTE CONTROL

1. Confirm the machine is connected to a working outlet before programming the remote control.
2. Press and hold the Receiver "set" button (Fig. 40) on the bottom of the ON/OFF control box until you hear beeping.
3. Press the remote control "Reset" button (Fig. 40) simultaneously with the receiver "set" button until you hear beeping. Release both buttons to complete the set up.



Figure 41: Programming remote control

LAGUNA

P|Flux Series

PROGRAMMING THE REMOTE CONTROL

1. Confirm the machine is switched ON before programming the remote control.
2. Press the black set button on the bottom of the remote switch until you hear two beeps.
3. Press the Remote set button on your handheld controller simultaneously with the black button until you hear three beeps to complete the set up.



Figure 5: Receiver Set Button

MULTIPLE HANDHELD REMOTE CONTROL SETUP

You can pair up to five (max.) handheld remotes. Each handheld remote needs to be set up individually following the programming steps above. If you set up a sixth handheld remote, it will override the first handheld remote. If a seventh handheld remote is setup, it will override the second handheld remote. And so on.

X|Flux Series

PROGRAMMING THE REMOTE CONTROL

1. Confirm the machine is switched ON before programming the remote control.
2. Press the black SET button on the bottom of the remote control until two beeps are heard.
3. Press the Remote SET button on the Remote Control while simultaneously pressing the black Receiver SET button until three beeps are heard, completing the set up.



Figure 6: Receiver Set Button