

How to reset the remote control frequency.

1. Hold the reset button until the box beeps three times.

This resets the memory of the control box.

The button is located on the underside of the control box.

2. Press and hold the reset button until the control box beeps once.

This puts the control box into the learn mode.

3. Push and hold the ON button on the remote control until the control box beeps.

This sets the control box to the remote control.

4. It is possible to set an infinite amount of remote controls to the control box.

If you want to set more than one remote controls, proceed as below.

4.1. After setting the first remote control there is a three second window to add an additional remote control and an additional three second window after setting the second remote control to set the next remote control etc.

4.2 During the three seconds, press the ON button on the second remote control and repeat for each additional remote controls.


5. Once all the remotes have been set, Press the reset button on the control box. This stops the learning mode and the dust collector is ready to accept commands from the remote control /s



Dust collector control box



Reset button

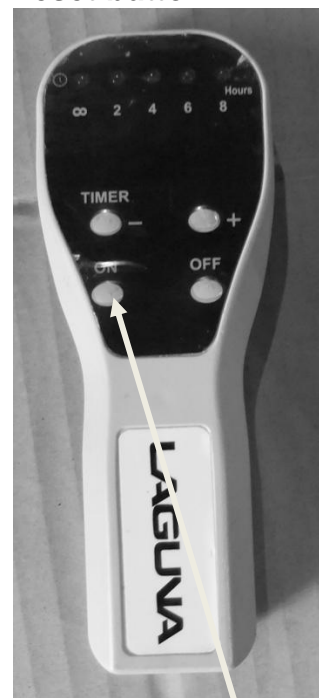

On button